

1. Pull the power supply wires out from the OUTLET BOX (A), and mount the mounting bracket (B) to the OUTLET BOX (A), using MOUNTING SCREWS (C)
2. Attach the power supply wires to the fixture load wires by connecting BLACK to BLACK, and WHITE to WHITE . Attach the POWER SUPPLY GROUND WIRE from the OUTLET BOX (A) and the FIXTURE GROUND WIRE from the fixture to the GREEN GROUND SCREW (E) on the mounting bracket (B) or connect both wires together using the correct size of wire connectors.
3. Placing the BASE (D) on the fixture over the OUTLET BOX (A) and onto the fixture mounting screws (G), and adjust the fixture mounting screws until they protrude out from the BASE (D). Remove the BASE and secure the position of the fixture mounting screws by tightening the HEX NUT (F) against the mounting bracket (B) . Place the BASE (D) back onto the fixture mounting screws (G) ,fit the plastic gasket (H) onto the mounting screws (G) then tighten with the Finail (I).
4. Turn the glass shade (J) onto the ceiling pan (D) until it tightens.

