
ASSEMBLY AND INSTALLATION INSTRUCTIONS

C0078

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements. 2. READ AND SAVE THESE INSTRUCTIONS.

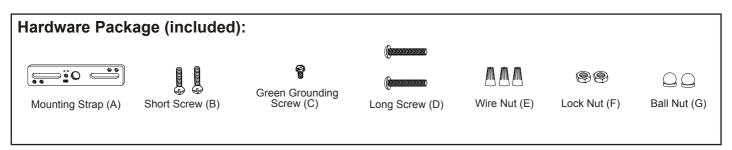

Assembly Instructions:


Turn off the power at fuse or circuit box.


- 1. Thread two long screws to the mounting strap, and secure with two lock nuts. Adjust the length of the screws if necessary.
- 2. Attach the mounting strap to the outlet box using two short screws.
- 3. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - ---Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.
 - ---Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.
 - ---Attach the fixture grounding wire (usually bare wire) to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut. If your outlet box does not have a house grounding wire, then wrap the fixture grounding wire around the green grounding screw. Carefully put the wires back into the outlet box.
- 4. Attach the canopy to the mounting strap: insert the long screws through the two holes, and secure with two ball nuts.
 - CAUTION: With silicone caulking compound, caulk completely around where back of canopy meets with the ceiling surface to prevent water from seeping into the outlet box.
- **Outlet Box House Grounding Wire** Wire Nut (E) Long Screw (D) Mounting Strap (A) Lock Nut (F) Short Screw (B) Green Grounding Screw (C) Canopy Ball Nut (G) **Bolt Nut** Socket Fixture Glass Shade Bulb Type A Max.100W (not included) Frame
- 5. Attach the glass shade and frame onto the fixture, secure them with bolt nuts.
- 6. Install bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at fuse or circuit box.



The following parts are available for re-order if damaged or missing.

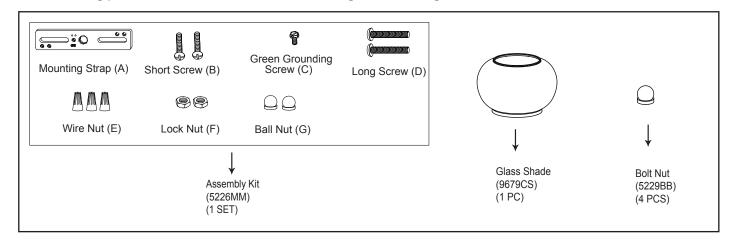

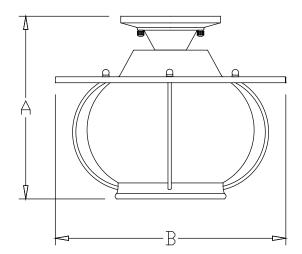

A: 13-1/2"

B: 11-1/4"